

WIZARD BOTTLE TRAP

To Open Trap Twist to open using a screw driver as a Lever

For Basin Installation

- Waste pipe must be well bevelled with a deburr or round file then lubricated before fitting trap.
- Trap may be fitted to the pipe first and then tightened to the basin or fitted to the basin first, then lowered onto the pipe (especially helpful when pedestal is fully enclosed).
- Note: Swivel nut only needs to be hand tightened and the "O" ring seal requires 15mm engagement only to allow for easy installation and removal



To Reassemble Trap

- Locate "O" ring on inverted inlet tube
- Lube the outer housing with liquid soap or similar
- Fit together and twist (only until the plastic faces meet)

For Bidet Installation

- The drainage should be set out in 100mm diameter PVC
- Glue a 100mm x 50mm reducer and a 50mm x 40mm reducer together so the eccentrics are opposite
- Calculate the height of the reducers and glue them below floor level inside the 100mm diameter pipe
- Bevel and lubricate the 40mm diameter pipe first and then glue it into position below the floor inside the 100mm diameter pipe



WWW.PLUMBDINGER.COM.AU



9330442004436

WIZARD BOTTLE TRAP

To Open Trap Twist to open using a screw driver as a Lever

For Basin Installation

- Waste pipe must be well bevelled with a deburr or round file then lubricated before fitting trap.
- Trap may be fitted to the pipe first and then tightened to the basin or fitted to the basin first, then lowered onto the pipe (especially helpful when pedestal is fully enclosed).
- Note: Swivel nut only needs to be hand tightened and the "O" ring seal requires 15mm engagement only to allow for easy installation and removal




To Reassemble Trap

- Locate "O" ring on inverted inlet tube
- Lube the outer housing with liquid soap or similar
- Fit together and twist (only until the plastic faces meet)

For Bidet Installation

- The drainage should be set out in 100mm diameter PVC
- Glue a 100mm x 50mm reducer and a 50mm x 40mm reducer together so the eccentrics are opposite
- Calculate the height of the reducers and glue them below floor level inside the 100mm diameter pipe
- Bevel and lubricate the 40mm diameter pipe first and then glue it into position below the floor inside the 100mm diameter pipe
- Bevel and lubricate the 40mm diameter pipe first and then glue it into position below the floor inside the 100mm diameter pipe

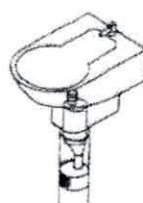

WWW.PLUMBDINGER.COM.AU